



INSTRUCTIONS: (GM-M2015U-01)

- Inspect product for shipping damage or manufacturing defects. If product is damaged, please contact us immediately at contact@valhallaoffroad.com. Do not discard packaging.

REQUIRED FOR INSTALL:

- 1/8" Hex Key
- 5/32" Drill Bit and Handheld Drill
- Phillips Head Screwdriver
- (Optional) 1/2" - 3/4" Wide Double-Sided Foam Tape

IN THE BOX:

- 1x M.A.P.S. Panel
- 1x Forward Bracket
- 1x Rear Bracket
- 4x #10-24 Machine Screws
- 4x #10 Self-Tapping Screws
- 1x #10 Rubber Washer (Passenger Side Only)



CONSIDERATIONS BEFORE INSTALLATION:


The center console and dash are not perfectly symmetrical. If installing both driver's side panel and passenger's side panels together, it is recommended that you install the driver's side panel first. Then install the passenger's side panel so the alignment matches the appearance of the driver's side. Using double sided tape or an assistant makes this process much easier.

INSTALLATION:


1. Attach mounting brackets to panel using #10-24 Machine Screws. Tabs on both brackets should be oriented as shown the pictures below. Apply optional double-sided tape to tabs on brackets.

NOTE:

Do not force screws when tightening. If resistance is encountered, remove screws, and make sure the holes and threads are clear of debris or excess paint.

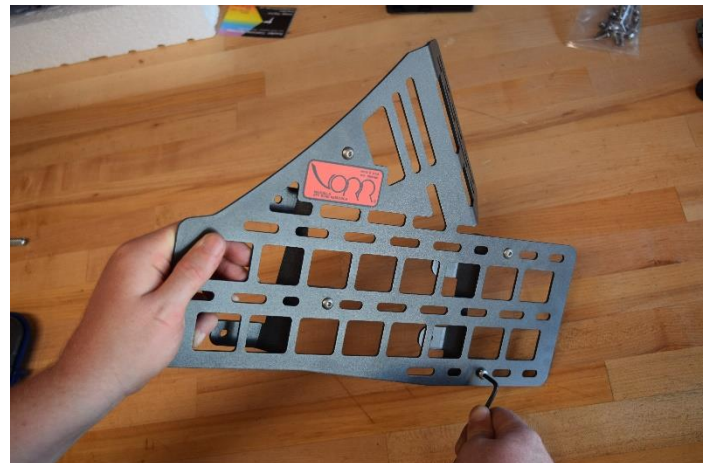

2. Place panel on center console. Align panel using guidance below, and mark hole locations.

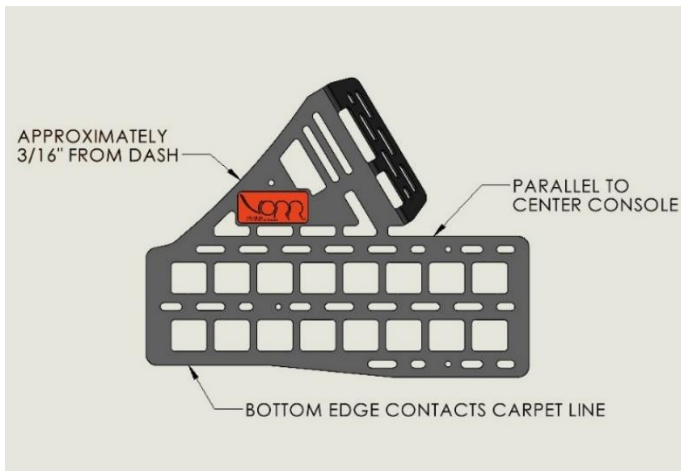


3. Use marks from step 2 to drill four holes using 5/32" drill bit. Only drill holes through plastic panel, approximately 1/8" deep.

4. Place panel on center console and align holes in brackets with newly drilled holes in the center console. Using four self-tapping screws fasten panel to vehicle with Philips head screwdriver. Tighten screws until snug only. Overtightening self-tapping screws can result in stripping threads in plastic panel.



(On Passenger's side place rubber washer between bottom tab on front bracket and center console before installing self-tapping screw.)

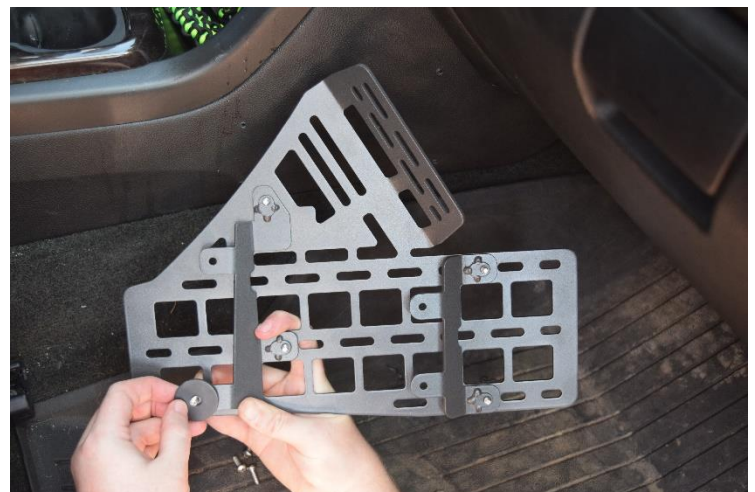

5. To install MOLLE bags, or other equipment to panel, remove #10-24 machine screws to separate panel from mounting brackets. Removing panel from brackets when mounting bags and other equipment reduces fatigue center console and allows easy access to panel.



6. When panel is configured to your preferences, reattach to brackets with #10-24 screws. You have completed installation of your Valhalla Off-Road Research M.A.P.S. Center Console Panel. Enjoy!



ALTERNATE INSTALL NOTES: If you strip out the self-tapping screws, or if you plan on mounting heavy hardware to the panel such as a CB Radio or Tablet computer, remove the plastic console panel side from the truck replace self-tapping screws with #10-24 machines screws with a large diameter fender washer and nylon-insert locknut. Then reinstall plastic console panel side on truck.